

X-Shot Stalker

Information:

The X-Shot Stalker is our rapid missile fire bow and arrow blaster. For more information on the X-Shot Stalker and other items in the X-Shot Arsenal, visit www.x-shot.com

Instructions:

1. Pull back the handle until you hear a click. Pull the trigger to launch megafoam arrow.
2. Push the yellow handle all the way back in before repeating step 1.
3. Launch tip: For automatic handle retraction, increase the tension of the elastic cord until taut enough to automatically pull the yellow handle in. You can increase the tension of the elastic cord by making it shorter and tying it back into its original place.

Warnings:

The X-Shot Sidewinder was designed for children ages 6 and up. This product contains small parts and is not suitable for children under the age of 3 years. Do not aim at eyes or face. To ensure safety, only use darts designed for this product. Dart blaster and darts should not be modified.

This product could be mistaken for an actual firearm by law enforcement officers and others. It may be a crime to alter any state or federal required markings and coloration in an attempt to make the product appear more realistic. It may be a crime to brandish and display the product in public.

