

Double-sided printing

Front size:100\*145mm

**Robo Jellyfish Instructions****ZURU****Robo Jellyfish On/Off Activation**

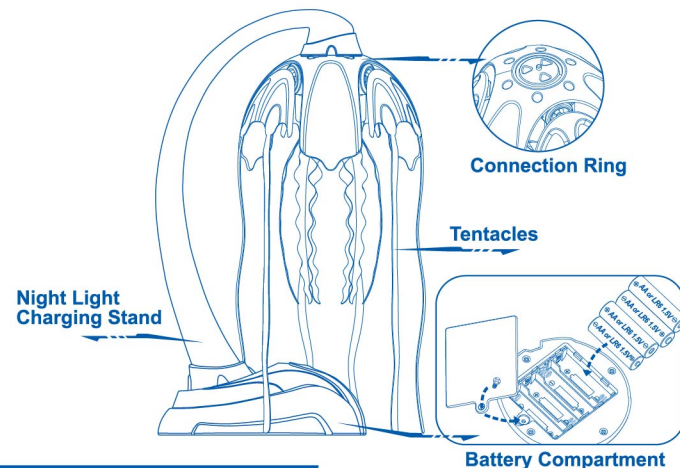
Make sure your Robo Jellyfish is fully charged before you use it for the first time.

To **TURN ON** your Robo Jellyfish, simply place it in the water. It is water activated and will swim as soon as it is in the water.

To **TURN OFF** your Robo Jellyfish or play with it outside the tank, take it out of the water and dry it with a soft, clean cloth.

**Robo Jellyfish LED lights**

To activate your Robo Jellyfish LED light's, simply place it in the water and it will activate and change colours. To **TURN OFF** your Robo Jellyfish LED light's simply take it out of the water.

**Charging Your Robo Jellyfish**

Your Robo Jellyfish is rechargeable, it has rechargeable batteries in it and comes with a charging night light stand. To recharge it, simply ensure your Robo Jellyfish is dry and then connect the top of the Jellyfish with the bottom of the lamp head using the connection ring. Hold until connected. Once connected, your Robo Jellyfish will start to charge. You will know it is charging when the Red light comes on. When it turns off, your Robo Jellyfish is ready to swim again! The charging process should take approximately 40 minutes.

**Night Light Charging Stand Instructions**

To create a night light with flashing LEDs, connect your Jellyfish to the night stand. To do this, simply ensure your Robo Jellyfish is dry and then connect it to the top of the Jellyfish with the bottom of the lamp head using the connection ring. Hold until connected. After approximately 30 seconds of being connected, the LED will turn on. Once the Jellyfish has completed charging, the LED will turn off.

**Caution: Do not put the night light charging stand into the water.**

Back size:100\*145mm

**TO REPLACE BATTERIES****Changing the batteries in your Night Light Charging Stand**

1. Using a crosshead screwdriver, unscrew the battery door, using an anti-clockwise motion.
2. Replace the 4 batteries (AA or LR6) (not included) with new batteries.
3. Pay attention to the correct polarities (- / +), ensuring these are inserted correctly.
4. Make sure the rubber seal on the battery door is in the correct position.
5. Replace the battery door and screw in the screw until tight, using a clockwise motion.

**Always ask an adult to replace batteries.**

**After playing, do not leave your Jellyfish in the water.**

**Do not dispose of batteries in a fire, they may explode or leak. Follow battery information on this instruction sheet carefully for battery disposal.**

**Robo Jellyfish Playset**

The Robo Jellyfish Playset comes with x1 Robo Jellyfish, x1 Night Light Charging Stand, x1 Tank and x1 Tank Tubing.



Before using the Playset you need to construct the Tank by following the below steps:

1. Unfold the Tank
2. Unwrap the Tank Tubing
3. Locate the hole in the seam at the top of the Tank
4. Insert one end of the Tank Tubing into the hole and gently feed the tube around the seam until both ends connect
5. Clip the two ends of the Tank Tubing together
6. The Tank will now be stable and is ready to fill with water

**IMPORTANT: BATTERY INFORMATION****⚠ CAUTION**

A76 / LR44 / AAA or LR03 batteries are classed as small parts and should be kept away from small children and children who are prone to putting things in their mouths. If batteries are swallowed, see a doctor immediately and have your doctor call your poison control centre.

Always follow the instructions, inserting batteries correctly and matching the - and + signs.

Do not mix old and new batteries or carbon-zinc batteries with alkaline batteries.

**IMMEDIATELY** remove and dispose of old batteries from the product and remove the batteries if the product is not going to be played with for a significant length of time.

Do not bring batteries in contact with water.

Do not short circuit the supply terminals.

Do not let batteries touch each other when not in use.

Should this product be affected by local electrical interference, move it away from other electrical equipment.

Reset if necessary by removing and then reinserting the batteries.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

**WARNING:**  
CHOKING HAZARD-Small parts.  
Not for children under 3 yrs.

