

Front size:86*125mm

My Magical Seahorse Instructions

AGES 3+

Play Instructions

Magical Seahorse On/Off Activation

To **TURN ON** your Magical Seahorse simply place her in the water. To **TURN OFF** your Magical Seahorse or play with her outside the tank, take her out of the water and dry her with a soft, clean cloth.

Power Save Mode


Tapping Activation Mode

To **SAVE** battery **POWER** your Magical Seahorse will automatically switch herself off in water after approximately 1 minute. To reactivate your Magical Seahorse, tap firmly next to your Seahorse on the side of the vessel she is currently swimming in. Your Magical Seahorse will sense the tapping and start to swim.

PLEASE NOTE for best performance tap **NEXT** to your Magical Seahorse.

If for any reason the Tapping Activation Mode does not work please remove your Seahorse from the water for 5 seconds, shake off any excess water and place back in the water.

If your Magical Seahorse begins to swim slowly or doesn't come to life after tapping firmly on the tank several times, please remove her from water and replace batteries

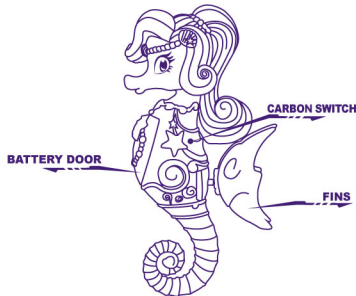

The Magic Touch

Your Magical seahorse will come to life with a gentle touch on the carbon switch.

Your Magical Seahorse's fins are fitted with a carbon switch which acts as a sensor.

Simply press lightly over the carbon switch located on the side of your Seahorse to make her fins flap.

TO REPLACE BATTERIES



Changing the batteries in your Magical Seahorse

Note: Always ask an adult to replace batteries. 2 bonus batteries included. Batteries should only be handled by an adult and kept away from children.


Caution: Store 2 replacement batteries in their blister.

- Using a crosshead screwdriver, unscrew the battery door, using an anti-clockwise motion.
- Replace the 2 batteries (LR44 1.5V) with new batteries.
- Pay attention to the correct polarities (- / +), ensuring these are inserted correctly.
- Make sure the rubber seal on the battery door is in the correct position.
- Replace the battery door and screw in the screw until tight, using a clockwise motion.



Back size:86*125mm

Water Wonderland Playset Instructions

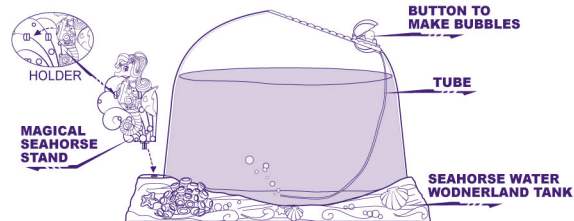

Water Wonderland Bubbles

To create magical bubbles in your Water Wonderland, simply open the seashell at the top of the tank and press then release the button. As you release the button, the bubbles will stop.

Water Wonderland Seahorse Stand

Your Water Wonderland comes with a Seahorse display stand. To clip your Seahorse onto the stand, simply turn her onto her side, facing away from the tank and press her against the stand. To remove her, simply pull her gently away from the stand.

The Stand is detachable and can be removed from your Water Wonderland playset by simply grasping it and pulling away from the set lightly.

For more information please visit www.zuru.com

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

LR44 batteries are classed as small parts and should be kept away from small children and children who are prone to putting things in their mouths. If batteries are swallowed, see a doctor immediately and have your doctor call your poison control centre.

Always follow the instructions, inserting batteries correctly and matching the - and + signs.

Do not mix old and new batteries or carbon-zinc batteries with alkaline batteries.

IMMEDIATELY remove and dispose of old batteries from the product and remove the batteries if the product is not going to be played with for a significant length of time.

Always store batteries in the blister so they are not touching each other.

Do not bring batteries in contact with water.

Please wrap batteries individually in paper or tape once removed from Magical Seahorse or discarding.

If discarding please wrap batteries individually in paper or tape as per image above and discard immediately, do not leave sitting out.

Please dry the Magical Seahorse thoroughly before attempting battery change.

Please close the battery doors thoroughly before putting the Magical Seahorse back into water.

Do not short circuit the supply terminals.

Do not put batteries on metal surfaces.

Do not let batteries touch each other when not in use.

Should this product be affected by local electrical interference move it away from other electrical equipment.

Reset if necessary by removing and then reinserting the batteries.



WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 yrs.



ZURU
www.zuru.com