

Robo SpongeBob Instructions

ZURU

SpongeBob On/Off Activation

To **TURN ON** Robo SpongeBob simply place him in the water.
To **TURN OFF** Robo SpongeBob or play with him outside the tank, take him out of the water and dry him with a soft, clean cloth.

Power Save Mode

To **SAVE** battery **POWER** Robo SpongeBob will automatically switch off in water after 4 **MINUTES**.
To **REACTIVATE** take Robo SpongeBob out of the water for 5 seconds, shake off excess water and place him back in the water.

Swimming upwards

To make your Robo SpongeBob swim up, simply drop him in water with both hands facing down and drop him in the water

Dancing


To make your Robo SpongeBob dance, simple move one of his hands to face upwards and the other one to face downwards. Then drop him in water and watch him dance! Change his arms in the other direction and he will dance on the opposite direction.

Gliding forwards

To make your Robo SpongeBob glide forward, simply place both of his arms to face backwards, drop him in water and watch him go!

Gliding backwards

To make your Robo SpongeBob glide backwards, simply place both of his arms to face forward, drop him in water and watch him go!

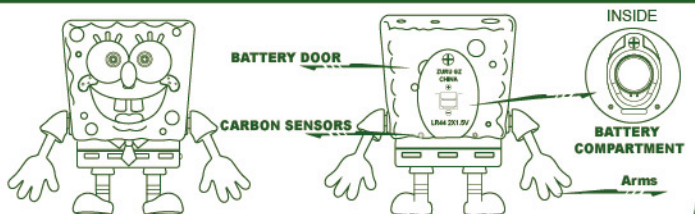

Do not mix old and new batteries
Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 yrs.



TO REPLACE BATTERIES

4 x A76 or LR 44 Alkaline BATTERIES INCLUDED
(two in Robo SpongeBob and one replacement set).

Replace Robo SpongeBob batteries with 2 x 1.5V A76 or LR44 size alkaline batteries.

Cross head screwdriver (not included) needed to replace batteries.

1. Use a cross head screwdriver (not included) to unscrew the screws in the battery door
2. Remove door and the old batteries. Throw away old batteries responsibly. As per battery instruction opposite.
3. Insert two new alkaline batteries.
4. Replace door and screw in the screws until tight.

Before use, please ensure battery door screw is tightly bound, and O-Ring is well aligned.

Always ask an adult to replace batteries.

After playing, do not leave the toy sitting in water.

Do not dispose of batteries in a fire, they may explode or leak. Follow battery information on this instruction sheet carefully for battery disposal.

- Non-rechargeable batteries are not to be recharged:
- Batteries are to be inserted with correct polarity:
- Exhausted batteries are to be removed from the toy:
- The supply terminals are not to be short-circuited.

